

## **ANAL ADULT TOYS**

***Thank you for purchasing an Anal Toy from Lola Montez.***

You can use Anal Toys with or without your partner. The anus and rectum are packed with sensitive nerve endings. Many people –male and female– find this to be their most sensitive erogenous zone. For men it is even more so because of the prostate gland. By stimulating this gland a man is able to have multiple orgasms, orgasm without ejaculation and experience an orgasm unlike a penis induced orgasm.

See our Blog post on **Prostate Massage** and **Anal Sex 101**.

**NEVER** insert anything into the anus that does not have a handle or flared base. The anus sucks during orgasm and you don't want an embarrassing trip to your local hospital.

### **HOW TO USE:**

- 1 Remove your toy from the packaging. Please give it a clean before you use it (remember someone had to package it). See cleaning instructions below.
- 2 Most battery-operated toys are rechargeable or take either AA or AAA batteries. Fit the correct batteries if necessary. If the toy comes fitted with batteries unscrew the lid and remove the seal which prevents contact.
  - a. If the toy doesn't turn off or will not turn on, check that you have inserted them correctly. Most toys will show you which side the positive and negative must go.
- 3 If you purchased a rechargeable toy, it may have some charge in it but it is recommended to charge it for about 4 hours before use and never let it go completely flat.
- 4 As soon as the charge weakens recharge your toy. Don't wait for it to die completely and don't leave it uncharged, it compromises the battery.
- 5 Check how the toy works. How many speeds and rhythms does it have? Figure out how to turn it off.
  - a. Many toys require you to hold the power button down for between 5 and 10 seconds to turn it off.
  - b. It may have a travel lock function. This usually requires the power and speed button to be held down together for a number of seconds. Repeat to unlock.
- 6 If there is anything wrong with your toy we have a 30 day REPLACEMENT POLICY. Check out our website for T&C's.

Now you are ready to play.

### **PLAYING WITH YOUR TOY.**

Play with or without your partner.

Remember during anal play to always use plenty of lubricant. Wash yourself and your toys thoroughly. We find it easier to cover an anal toy with a condom for easy cleaning.

Don't mix vaginal and anal play as bacteria may be transferred.

*Did we mention – use plenty of lube? We suggest Pjur Original Bodyglide.*

Plugs are inserted into the anus and left there during sex. Because of the many nerve endings in the anus, this intensifies the orgasm. Anal plugs come in all shapes and sizes, and some even vibrate.

You'll find plugs that are made from rubber, silicone, acrylic, jelly, glass or stainless steel. Choose one with a flange base – this ensures that the sphincter muscle tightens around the base and the plug cannot get 'lost'.

### **ANAL BEADS**

Before initial usage, run the pads of your fingers over each bead to make sure there are no sharp tags or seams left over from the moulding process. If there are, use a nail file to file the points smooth. Prior to each use, check the knot below the last bead to make sure that it is tied securely.

**A tip:** If you're concerned with becoming addicted to me (I should be so lucky) **use the toy as foreplay** to bring you close to your tipping point and then finish off with your own hand or your partner. Voila!

### **CLEANING YOUR TOY.**

After use please **clean your vibrator properly**. Use **Eva Toy Cleaner** or any anti bacterial soap. If possible let the toy air dry. If not dry the toy with a lint free cloth before storing.

Store each toy separately. Many toys are made from materials that get damaged if they touch each other. Cyberskin is particularly sensitive.

### **SPECIAL CARE INSTRUCTIONS**

- 1 Cyberskin needs to be treated with cornstarch to prevent it from going sticky.
- 2 Silicone toys must not be used with silicone toys, it damages the surface although **Pjur Original Bodyglide** claims to be safe to be used with silicone toys.
- 3 To clean plastic anal beads, scrub with a mild soap and hot water, paying special attention to the cord. An anti bacterial toy cleaner will ensure that all bacteria has been killed. Try **Eva Toy Cleaner**. Beads not be shared especially if they have a string.
- 4 **Remove my batteries** before you put the toy away. The batteries will last longer and you can prevent damaging the mechanism if the battery leaks.
- 5 Before you use the toy again wipe it down just in case something got stuck to it while it was stored.

For additional pleasure try using the toy with a lubricant, **Lola Montez** supplies a variety of lubricants suitable just for you.

We hope you love your purchase and that you found this information useful.

Please take review the toy online to help others make their choice. For more information you can email [sharon@lolamontez.co.za](mailto:sharon@lolamontez.co.za) and follow us on our socials Instagram - @lolamontezboutique and Facebook @LOLAMONTEZ.PAGE