


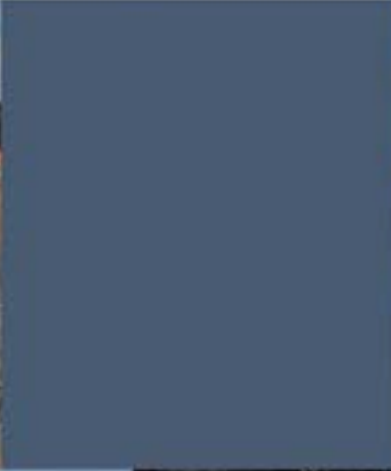

Bata Industrials[®]

FOOTWEAR BEYOND SAFETY



INCORPORATING THE

BELL


RANGE OF FOOTWEAR



NOSA[®]
★★★★★



Bata Industrials® Footwear Beyond Safety

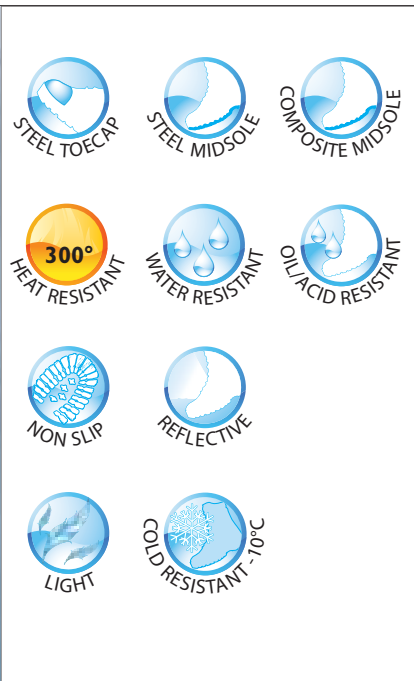

Bata Industrials® combines more than 100 years of experience with advanced materials and techniques.

Using the latest insights into bio-mechanics, we continuously push the envelope of our capabilities with one single overriding goal: **to guarantee the wearers of our shoes optimum safety, health and comfort.**

This philosophy has won Bata Industrials® an outstanding reputation in the premium class of safety footwear.

Safety remains a very important issue in the workplace, and today's workforce demands more from their footwear. They want extreme comfort from shoes that not only keep them safe but also look good. That's why Bata Industrials® is fully focused on the wearer experience and the perceptions of these men and women who wear our shoes. Every day their wishes and needs drive our efforts in research, development and design, driving our shoe design beyond current norms.



Under license to Bata Industrials®, a division of Futura Footwear Ltd

INTERVENTION 825 661

EN ISO 20345 53



Intervention Mens

Full-grain leather upper
Leather lining
300° heat-resistant rubber sole
4-13
Black
Conforms to:
BS 7971-5 2005 Type 2 level 3

Water-resistant and
fire-retardant upper



BOA 819 697

CE ISO 20345 S1P



Boa® 213

Nubuck leather/nylon upper
PU/Quattro Tech® triple-density sole
Triple-density inner sole
Boa® lacing system
TPU outsole
Composite midsole anti-penetration
5-13
Black



BI 420 SERIES Comfortable & Durable

EN ISO 20345 S1 A SRA HRO



Reference

1. Full-grain leather uppers
 2. Microban® anti-bacterial lining and sock
 3. PU comfort footbed
 4. Cushion PU midsole
 5. 300° heat-resistant rubber outsole
 6. Impact zone sole design
 7. Lamella impact-absorption inserts
 8. Flex point bellows tongue
 9. Heavy-duty nylon pull tabs
 10. Easy-removal lugs
 11. High-density padded collar and tongue
 12. Heavy-duty fastening system
 13. Grip zones
 14. Ladder grips
 15. Liquid dispersion system
 16. Latex toe capliner
 17. Rubber toecap strip
 18. 200 joule steel toecap
- Also features anti-static sole.



Also available in non-steel toecap.

NOSA®

★★★★★

BI 753 SERIES 742 753

EN ISO 20345 S1 P SRA



Also available in non-steel toecap.



Aggressive tread pattern for grip on most surfaces.

*Fluid dispersion system on sole.

Reference

1. Premium full-grain leather upper
2. Padded collar and tongue
3. Reflective tab
4. 200 joule safety toecap
5. Cushioned phylon midsole
6. Vibram® rubber outsole

Also features:

- Breathable moisture-absorbent lining
- Comfort footbed insole



BI 225 SERIES 742 225

EN ISO 20345 SBP



BI 225 Series Airport Friendly

- | | |
|--|--|
| 1. Suede leather uppers | 6. Compact flat bed insole |
| 2. Padded collar and tongue | 7. Composite penetration-resistant midsole |
| 3. Heel abrasion and support | 8. Cushioned phylon midsole |
| 4. Lightweight composite (metal-free) toecap | 9. Rubber outsole |
| 5. Toe bumper | |

CE EN ISO 20345 SBP



742 521-60



Trail 742 521
 Microfibre/mesh upper
 Rubber bumper
 Phylon/rubber sole
 5-12
 CE ISO 20345 S1

BI 220 SERIES 742 220

EN ISO 20345 SB

BELL



Reference

- | | |
|-----------------------------|---------------------------------------|
| 1. Premium leather uppers | 5. 200 joule impact-resistant toecap |
| 2. Padded collar and tongue | 6. Rubber sole |
| 3. Heel-abrasion protection | |
| 4. Leather lining | Also features comfort footbed insole. |



Rhino Reflective

SABS



Rhino Reflective
 Available on:
 Rhino 1 Reflective 881 780
 White/White & Black/Toffee
 Rhino 2 Reflective 881 879
 White/White & Black/Toffee

3M Scotchlite™
 Reflective Material



Reference

1. Virgin PVC upper
2. Nitrile PVC sole
3. 3M Scotchlite™ reflective
4. Ankle protection
5. Easy-removal lugs
6. Steel toecap 200 joule
7. Anti-cracking sole

Also features comfort insole.

Reference (below)

1. Heel and toe grip areas
2. Maximum fluid dispersion
3. Crack-retardant sole
4. Arch support/reinforcing



Gumboots: Heavy Duty



Roxx™ Metaguard

Lightweight, tough and waterproof ergonomic design minimises metatarsal injuries and protects the small toe.

Available on Rhino 1 and Rhino 2 boots



NOSA
★★★★★
SABS

Rhino 1
881 980-64

NOSA
★★★★★
SABS

Rhino 1
881 980-11

NOSA
★★★★★
SABS

Rhino 1
881 980-15

NOSA
★★★★★
SABS



Rhino 2
881 979-64

NOSA
★★★★★
SABS

Rhino 2
881 979-11

NOSA
★★★★★
SABS

Rhino 2
881 979-15



Rhino 2 Mid
881 975-60





NOSA
★★★★★

Rhino 3
781 980-15



Rhino 3
781 980-60



Workmaster
881 991-60



Fleece Liner
982 221-06



Rhino 1

881 980-64 Black/Toffee

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 980-11 White/White

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 980-15 White/Red

Virgin PVC upper
Nitrile PVC sole

SABS

4-13

Rhino 1 Reflective

881 780-11 White/White

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 780-64 Black/Toffee

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



Rhino 2

881 979-11 White/White

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 979-15 White/Red

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 979-64 Black Toffee

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



Rhino 2 Reflective

881 879-11 White/White

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 879-15 White/Red

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



881 879-64 Black Toffee

Virgin PVC upper
Nitrile PVC sole

SABS

4-13



Rhino 2 Mid

881 975-60 Black/Black

Virgin PVC upper
Nitrile PVC sole

4-13



Rhino 3

781 980-15 White/Red

Virgin PVC upper
Nitrile PVC sole

SABS

4-13

781 980-60 Black/Black

Virgin PVC upper
Nitrile PVC sole

4-13

Workmaster

881 991-60 Black/Black

Virgin PVC upper
Nitrile PVC sole

5-12

Fleece Liner

982 221-06 White

S-XXL

Gumboots: General Purpose



NOSA
★★★★★
SABS



Jobber
781 982-14



NOSA
★★★★★
SABS



Elegant
681 984-14



Jobber
781 982-60



Elegant
681 984-60



SABS

Rhino 3
781 980-60



NOSA
★★★★★
SABS



Rhino 3
781 980-14



SABS



Jobber
781 982-76



SABS



Elegant
681 984-76



Elegant Mule
681 986-60



Elegant Mule
681 986-15



NOSA
★★★★★
SABS

Jobber
781 987-15



NOSA
★★★★★
SABS

Elegant
681 983-15



Jobber Mule
781 986-60



Jobber Mule
781 986-15



Jobber Shoe
781 994-15



Jobber Mid
781 995-15



Elegant

681 984-14 White/Blue
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
3-9
SABS



681 984-60 Black
Virgin PVC upper
Nitrile PVC sole
3-9
SABS

681 984-76 Green
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
3-9
SABS



681 983-15 White/Red
Virgin PVC upper
Nitrile PVC sole
3-9
SABS

Jobber

781 982-14 White/Blue
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
5-12
SABS



781 982-60 Black
Virgin PVC upper
Nitrile PVC sole
5-12
SABS

781 982-76 Green
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
5-12
SABS



781 987-15 White/Red
Virgin PVC upper
Nitrile PVC sole
5-12
SABS

Rhino 3

781 980-60 Black
Virgin PVC upper
Nitrile PVC sole
4-13
SABS

781 980-14 White/Blue
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
4-13
SABS



Elegant Mule

681 986-60 Black
Virgin PVC upper
Nitrile PVC sole
3-9

681 986-15 White/Red
Virgin PVC upper
Nitrile PVC sole
3-9

Jobber Mule

781 986-60 Black
Virgin PVC upper
Nitrile PVC sole
5-12

781 986-15 White/Red
Virgin PVC upper
Nitrile PVC sole
5-12

Jobber Shoe

781 994-15 White/Red
Virgin PVC upper
Nitrile PVC sole
Anti-bacterial
Anti-microbial
3-9

Jobber Mid

781 995-15 White/Red
Virgin PVC upper
Nitrile PVC sole
5-12

Safety: Mens



NOSA
★★★★★

Atlantic
799 021-60

NOSA
★★★★★

Atlantic
799 021-40

NOSA
★★★★★

Pacific
799 020-60

NOSA
★★★★★

Pacific
799 020-40

NOSA
★★★★★

Pacific – Furliner
799 010-60

NOSA
★★★★★

Atlantic – Furliner
799 011-60

NOSA
★★★★★

Atlantic – Steel midsole
799 039-60

NOSA
★★★★★

Atlantic – Steel midsole
799 039-40



NOSA
★★★★★

Pacific – Steel midsole
799 038-60

NOSA
★★★★★

Pacific – Steel midsole
799 038-40

Chelsea
791 492-40

Slip resistant certified
Flex endurance test
Passed 500 000 cycles







Econo Chukka
803 145-60



Econo Shoe
803 142-60



Terra
594 775-60



Atlantic

799 021-60 Black and 799 021-40 Brown
Leather upper
Dual density PU sole
Sizes 3-13
CE EN ISO 20345 S1 SRA



Pacific

799 020-60 Black, 799 020-40 Brown
Leather upper
Dual density PU sole
Sizes 3-13
CE EN ISO 20345 S1 SRA



Pacific - Furliner

799 010-60 Black, 799 010-40 Brown
Leather upper
Dual density PU sole
Sizes 3-13
CE EN ISO 20345 S1 SRA



Atlantic - Furliner

799 011-60 Black and 799 011-40 Brown
Leather upper
Dual density PU sole
Sizes 3-13
CE EN ISO 20345 S1 SRA



Atlantic - Steel midsole

799 039-60 Black, 799 039-40 Brown
Leather upper
Dual density PU sole
3-13
CE EN ISO 20345 S1P SRA



Pacific - Steel midsole

799 038-60 Black, 799 038-40 Brown
Leather upper
Dual density PU sole
3-13
CE EN ISO 20345 S1 SRA



Chelsea

791 492-40 Dark Chocolate
Leather upper
Dual density PU sole
5-12
CE EN ISO 20345 S1 SRA



Econo Chukka

803 145-60 Black
Leather upper
Nitrile PVC sole
5-12
SANS 20345 S1



Econo Shoe

803 142-60 Black
Leather upper
Nitrile PVC sole
5-12
SANS 20345 S1



Terra

594 775-60 Black
Leather upper
Dual density PU sole
3-8
CE EN ISO 20345 S1



Safety: Mens



BI 420 Boot
742 064-60



BI 420 Boot
742 064-40



Slip resistant
Heat resistant



BI 220 Shoe
742 220-60



BI 220 Shoe
742 220-40



BI 420 Chelsea
742 062-60



BI 420 Chelsea
742 062-40



Hurricane
795 338-06



Hurricane
795 338-60



Cobra
789 352-27



Trail
742 521-60



Boa® 213
819 697



NOSA

BELL

BI 225 Sport Boot
742 225-90



NOSA

BELL

BI 753 Boot
742 753-44



BI 420 Boot

742 064-60 Black,
742 064-40 Brown
Full-grain leather upper
Microban® lining and sock
Deep comfort insole
Anti-static rubber sole
5-14
CE EN ISO 20345 S1 A SRA HRO



BI 220 Shoe

742 220-60 Black,
742 220-40 Brown
Full-grain leather upper
Leather lining
Rubber sole
5-12
CE EN ISO 20345 SB



BI 420 Chelsea

742 062-60 Black,
742 062-40 Brown
Full-grain leather upper
Microban® lining and sock
Deep comfort insole
5-14
CE EN ISO 20345 S1 A SRA HRO



Hurricane

795 338-06,
795 338-60
Suede leather upper
Phylon/rubber sole
Steel toecap
5-12
Grey or Black
CE ISO 20345 S1



Cobra

789 352-27
Suede leather upper
Phylon/rubber sole
5-12
Navy/Black
CE ISO 20345 S1



Trail

742 521-60
Microfibre/mesh upper
Rubber bumper
Phylon/rubber sole
5-12
CE ISO 20345 S1 P



Boa® 213

819 697 Black
Nubuck leather/nylon upper
PU/Quattro Tech®
triple-density TPU outsole
5-13
CE ISO 20345 S1P



BI 225 Sport Boot

742 225-90 Navy Blue/Yellow
Suede leather upper
Lining and sock
Rubber sole
5-12
CE EN ISO 20345 SBP



BI 753 Boot

742 753-44 Brown
Leather upper
Lining and sock
Deep comfort insole
5-14
CE EN ISO SRA certified



Uniform: Mens

	 <p>Sole Parabellum® SABS</p>	<p>SABS</p>  <p>Parabellum® 718 102-60</p>	<p>SABS</p>  <p>Parabellum® 718 102-40</p>
		<p>SABS</p>  <p>Parabellum® Oxford 718 103-60</p>	 <p>Parabellum® STC 818 102-60</p>
 <p>Sargeant 701 137-60</p>		 <p>Clerk 741 092-60</p>	
 <p>Intervention 825 661-60</p>	 <p>Brigade 793 234-40</p>		
<p>NOSA ★★★★★</p>  <p>Pacific 799 020-60</p>	 <p>Brigade 793 234-60</p>		



Parabellum®

718 102-60 Black, 718 102-40 Brown
 Leather upper
 Rubber sole
 5-13
 SABS

Parabellum® Oxford

718 103-60 Black
 Leather upper
 Rubber sole
 5-13
 SABS

Parabellum® STC

818 102-60 Black
 Leather upper
 Rubber sole
 5-13



Sargeant

701 137-60 Black
 Brown (made to order)
 Leather upper
 Rubber sole stitched through
 5-12

Clerk

741 092-60 Black
 Leather upper
 Nitrile PVC sole
 4-12

Intervention

825 661-60 Black
 Full-grain leather upper
 Leather lining
 Flame-retardant upper
 4-13
 CE EN ISO 20345 S3
 BS 7971-5 2005 Type 2 Level 3



Brigade

793 234-60 Black, 793 234-40 Brown
 Canvas upper/PU toe
 Rubber sole
 5-12

Pacific

799 020-60 Black, 799 020-40 Brown
 Leather upper
 Dual density PU sole
 Sizes 3-13
 CE EN ISO 20345 S1 SRA



Uniform: Ladies



Parabellum®
518 102-60



Claire
585 788-60



Jeena
562 512-60



Claire
585 788-90



Performer
571 282-60



Marie
588 458-60



Bella
518 518-60



Claire
585 788-66 Leather

Parabellum®

518 102-60 Black
Leather upper
Rubber sole
3-8

Claire

585 788-60 Black, 585 788-90, Navy
PU upper
PVC sole
3-9

Claire

585 788-66 Black
Leather upper
PVC sole
3-9

Jeena

562-512-60
Stitch and turn construction
Calf leather uppers
Ultra-comfort gel midsole
3-8

Performer

571 282-60 Black
Leather upper
PVC sole
3-8

Marie

588 458-60 Black
PU upper
TPR sole
4-9

Bella

518 518-60 Black
PU upper
PU sole
3-9

Safety: Ladies



Terra
594 775-60



Zola
587 468-65



Terra
594 775-60 Black
Leather upper
Dual-density PU sole
3-9
CE EN ISO 20345 S1



Zola
587 468-65 Black/Pink
Leather/mesh upper
Phylon/rubber sole
3-9
CE ISO 20345 S1



Non-Safety



BI 420 Boot
742 063-60



BI 420 Boot
742 063-40



BI 420 Chelsea
742 061-60



BI 420 Chelsea
742 061-40



BI 220 Shoe
742 221-60



BI 220 Shoe
742 221-40



BI 753 Boot
742 754-44



Canvas Black
700 012-60



Canvas Navy
700 012-90



BI 420 Boot

742 063-60 Black, 742 063-40 Brown
 Leather upper
 Microban® lining and sock
 300° heat-resistant PU/rubber sole
 Deep-comfort insole
 5-14
 CE EN ISO 20344 SRA HRO



BI 420 Chelsea

742 061-60 Black, 742 061-40 Brown
 Leather upper
 Microban® lining and sock
 300° heat-resistant PU/rubber sole
 Deep-comfort insole
 5-14
 CE EN ISO 20344 SRA HRO



BI 220 Shoe

742 221-60 Black, 742 221-40 Brown
 Leather upper
 Leather lining
 Rubber sole
 5-12

BI 753 Boot

742 754-44
 Leather upper
 Vibram® rubber sole
 5-12
 20344 SRA



Canvas Black

700 012-60
 Canvas upper
 Rubber sole
 3-12

Canvas Navy

700 012-90
 Canvas upper
 Rubber sole
 3-12

South Africa

Postal address

Bata Industrials, PO Box 128, Pinetown, 3610, South Africa

Physical address

Bata Industrials, Unit 1 Manchester Park, Manchester Road
Pinetown, 3610, South Africa

T: +27 (0) 31 701 4951

F: +27 (0) 31 701 0608

info@bataindustrials.co.za

Johannesburg Depot

31E Lake Road, Longmeadow Business Estate, Edenvale, Johannesburg

T: +27 (0) 11 997 3300

F: +27 (0) 11 608 0694

Bata Shoe Company Botswana

Postal address

PO Box 1882, Gaborone

Physical address

Plot 17979, Ramagononwane Road, G-West Industrial

Tel : +267 392 4575

Fax : +267 316 1182

Sales offices

South Africa

Durban, Johannesburg, Cape Town, Bloemfontein, East London and Port Elizabeth



Bata Industrials®

FOOTWEAR BEYOND SAFETY

www.bataindustrials.co.za